Specifications

Model	NVR-9004	
Operating system	LINUX	
Compression Standard	Standard H.264	
IPC Input	4CH(1920×1080, 1280×960, 1280×720 etc.)	
HDMI Output	1CH. HDMI interface; resolution:1920x1080P/60Hz	
VGA Output	1CH, VGA interface; resolution:1920x1080P/60Hz	
Preview resolution	4xD1/1x1080P(single channel for the IPC main stream, multi-	
Video Resolution	4CH*1080p/4CH×960P/4CH×720P, etc. (according to IPC input)	
Video Frame Rate	PAL: 25 frames / sec; NTSC: 30 frames / sec.	
Video stream	Support for Variable Bit Rate (VBR) / Constant Bit Rate (CBR	
Local Playback	Single-channel playback 1x1080P	
Backup	Support local, network backup	
Hard disk	One SATA hard drive (maximum 4TB)	
Network interface	1 RJ-45 port(10/100Mbps)	
Support mobile	iPhone, iPad, Android, Windows Phone	
Browser	IE8.0 and above. Firefox, Google	
Support Agreement	ONVIF2.0	
USB Interface	Two USB2.0 interface	
Multi-operation	Support for recording, playback, network, backup, mobile	
Dual-stream	Yes	
Operating Voltage	DC 12V	
Operating Temperature	-10 °C — 55 °C	
Humidity	10%~90%	
Power Consumption	≤ 24 W	

Item List

	Name	Quantity
1.	Mouse	1
2	CD	1
4	Power Adapter	1
5	Quick Installation Guide	1
6	Network Video Recorder	1



Network Video Recorder




Thank you for using our product, please read this manual carefully before use.

Instructions

- ♦ This equipment should be installed in a well-ventilated environment at proper distance away from the ground for heat dissipation. Do not block the vents and please avoid heat.
- ◆ This equipment should be kept horizontal during installation and avoid installing in locations subject to excessive vibration.
- ◆ Please keep it dry in case a short-circuit may cause fire or other hazard. This equipment is not weatherproof.
- ♦ To meet the needs of reading and writing extensive data in the long run, please select the hard disk recommended by manufacturer, which is suitable for the NVR, and purchase it from the formal channels to guarantee its quality.

 ◆ This product can not bear heavy weight, please do not
- place heavy objects on it or pile up.

1. Product Appearance Introduction

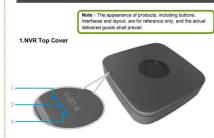

ltem		Function
1	Power Indicator	Steady light when the power connection works.
2	HDD Indicator	Steady light when the HDD works.
3	Network Indicator	Steady or flashing light when the network connection works.

2.NVR Rear Panel



Interface Name	Interface Function
VGA	VGA output
НОМІ	HDMI output
RJ45	Ethernet
USB 2.0	USB storage device and mouse
DC-12V	Power input

Note:
As for specific methods of operation, please refer to the disc's instruction manual.

2. Hard Disk Installation

tible with 2.5-inch and 3.5-inch hard disks, with maximum capacity of 4TB.







5) Align the top cover with the base blate and gently close. © Use screws to tighten the top cover to the base plate.





■ 3.Local System Login

After the normal startup, click the right mouse button and there will be a login dialogue. Then enters the user name and password in the input box. In the factory default state, there are two users, admin and guest, and the password is 12345. Admin is the default ligh-privileged user and guest is the default low-privileged user, only with privileges of monitoring and playback, etc.



4.Web Login

If the plug-ins cannot be loaded, you need to set IE as follows: Tools In the program cannot be loaded, you need to get it. It is closed in the second of the program o

shown below.
Enter the user name and password The factory default administrator user name is admin, no password. After the successful login, please reset an administrator password in time.



■ 5. Connection with the IPC

